Fluid Locations

4-cylinder Models

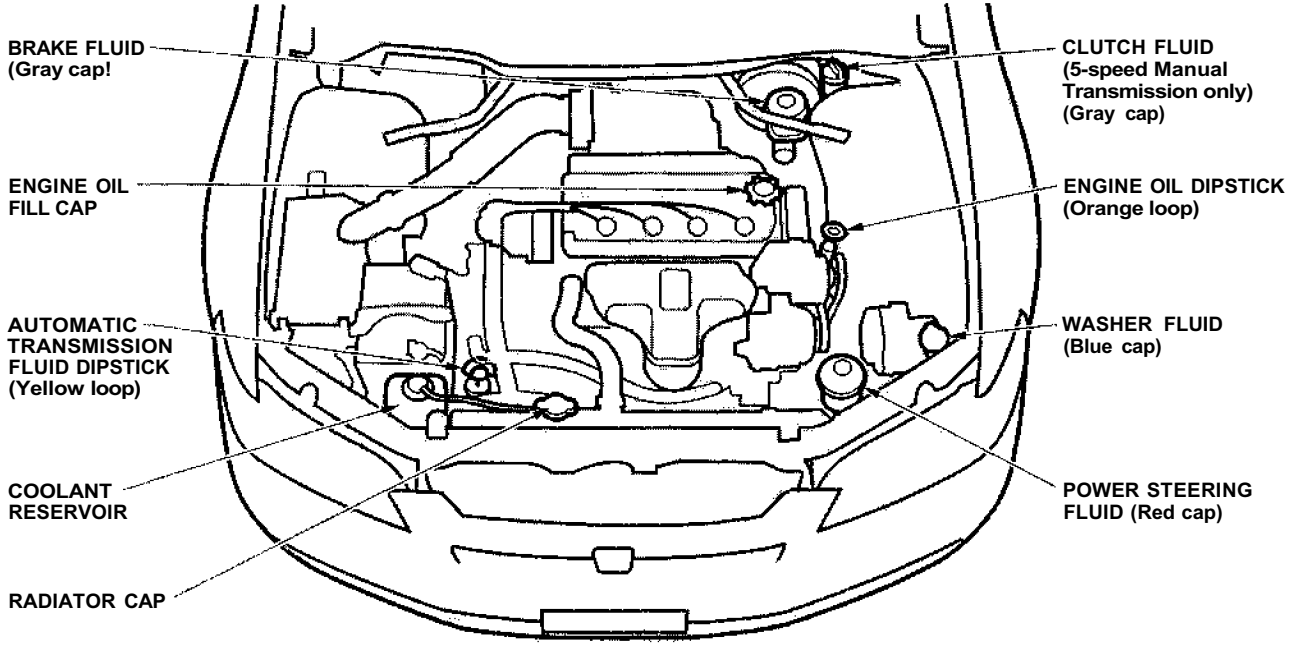

Fluid Locations

6-cylinder Models

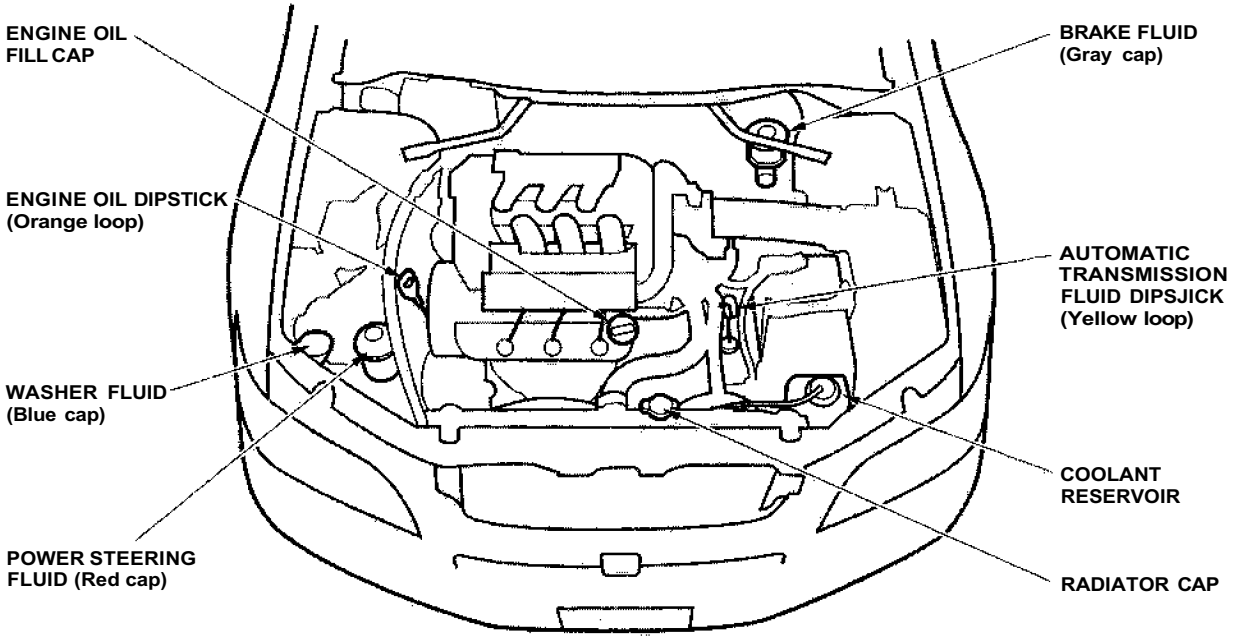
ENGINE OIL FILL CAP
ENGINE OIL DIPSTICK (Orange loop)
WASHER FLUID (Blue cap)
POWER STEERING FLUID (Red cap)
BRAKE FLUID (Gray cap)
AUTOMATIC TRANSMISSION FLUID DIPSJICK (Yellow loop)
COOLANT RESERVOIR
RADIATOR CAP

Engine Oil

Adding Oil

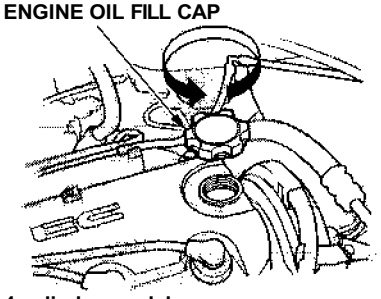

4-cylinder models

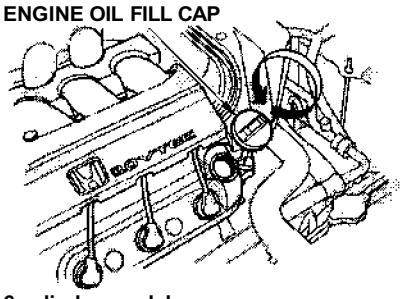

6-cylinder models

To add oil, unscrew and remove the engine oil fill cap on top of the valve cover. Pour in the oil, and replace the engine oil fill cap. Tighten it securely. Wait a few minutes and recheck the oil level. Do not fill above the upper mark; you could damage the engine.

Recommended Oil

Oil is a major contributor to your engine's performance and longevity. Always use a premium-grade detergent oil.